


4.8. Configuração Web

Utilizando o software VirCom, é possível pesquisar e configurar os parâmetros da interface em diferentes segmentos de rede. A configuração WEB via página integrada requer que o computador e a interface estejam no mesmo IP do segmento de rede, e o endereço IP da interface deve ser conhecido, por padrão é 192.168.1.254. Lembrando que não é necessário o software VirCom para acesso da configuração WEB.

1. Para o acesso digite o endereço da interface no navegador, por exemplo <http://192.168.1.254>, e será aberto a seguinte página da web:

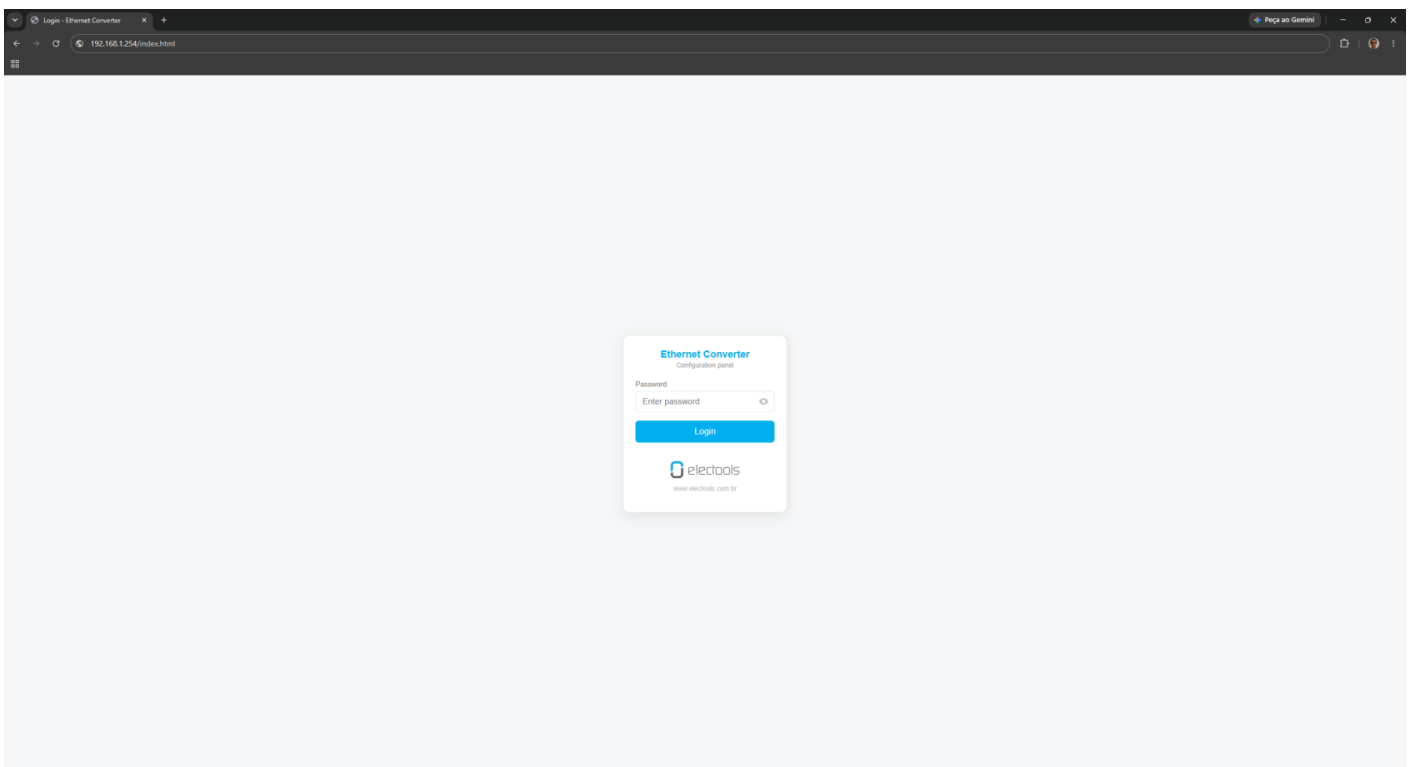

2. Por padrão, não existe uma senha definida na interface, portanto pressione o botão **Login** para avançar.

The screenshot displays the Electools web interface in Portuguese. The interface is organized into several sections for configuring a device:

- Device Information:** Fields for Device Name (ECD2305), Firmware Version (V1.470), and Device MAC (04-EE-E8-16-2A-F1).
- Network Settings:** Fields for Device IP (192.168.1.254), Device Port (4196), Device Web Port (80), Work Mode (TCP Server), Subnet Mask (255.255.255.0), Gateway (192.168.0.1), Destination IP (192.168.1.166), Destination Port (4196), and IP mode (Static).
- Serial Settings:** Fields for Baudrate (115200), Databits (8), Parity (None), Stopbits (1), and Flow control (None).
- Advanced Settings:** Fields for No Data Restart (Disable), No Data Restart Time (300), and Reconnect time (12).
- Multi-Host Settings:** Fields for Protocol (None), Instruction Time out (0), Enable Multi-host (No), and RS485 Conflict Time Gap (0).

A NOTE section at the bottom provides additional information:

- 1. Multi-host is always enabled when Protocol is Modbus TCP to RTU.
- 2. Time out is always 0 when Multi-host is disabled.
- 3. Time out only can be set as multiply of 32.

At the bottom, there is a 'Modify Web Login Key' section with fields for 'New Key' and 'Input Key Again'.

3. É possível alterar a linguagem para Português, clicando no botão **Português**. Na página é possível modificar os parâmetros principais da interface. Após a modificação dos parâmetros, clique no botão **Submit** ou **Enviar**.

Revision #1

Created 15 August 2026 22:02:30 by Electools

Updated 15 August 2026 22:02:30 by Electools